



Digital Key Safes

LKS200 & LKS500 instructions

The key safe is an ideal secure solution for the control of spare keys and allows authorized persons only to gain access to a key or keys by entering their chosen code combination. (choose your code wisely, one that you will remember and that is not familiar to anyone else). It is recommended to change the code periodically, and to install the key safe in a concealed, discreet position either internally or externally.

All Lockey key safes are supplied with the same factory code, it is 1982B. THEREFORE PLEASE SET A NEW CODE BEFORE USING.

Re-setting a new code;

To open press 1982B and turn knob to the right and lift out key safe front

- **Press in B button and turn knob to left**

- undo the 2 red screws and lift off the plate carefully. Supplied with the key safe are:

4 x fixing screws

4 x raw plugs

1 x tweezers

1 x blue non code tumbler

2 x red code tumblers

- Decide on the new code WHICH MUST ALWAYS END IN B
never remove the B tumbler

Your code group can consist of from 3 to 6 digits i.e. 690AB or 1580B

(although your code group is not sequential there are over 4,000 code possibilities)

- The code is determined by the number of red tumblers used (blue are non code)

- To increase your code add more red tumblers, to decrease add more blue

- **Turn the knob to the left to allow the tumblers to slide in & out easily**

- Using the tweezers provided move the tumblers to your own code (the tumblers are shaped to fit into the slots)

- All the tumblers in row 6 to B must be placed in as per the diagram,

- All the tumblers in row 1 to A must be placed in as per the diagram

The coloured tip must be facing upward


 
Do not force the tumblers in, simply turn the front knob and they will drop in.

- Replace the plate securing with the red screws.

Test your new code before locking up your Key Safe.

- Lock your Key Safe by sliding into the box,

Pressing the B button and turning the knob the left.

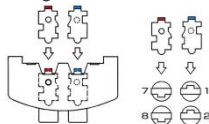

For Customer support/Technical/Sales please contact us:

Lockey Digital UK Ltd, Unit 6 Saxon Way, Melbourn, Royston, Hertfordshire SG8 6DN

Tel: +44(0) 1763 245245 Fax: +44 (0) 1763 260345 Email enquiries@lockeydigital.co.uk

www.lockeydigital.co.uk PLEASE KEEP THESE INSTRUCTIONS YOU MAY NEED THEM TO CHANGE YOUR CODE IN THE FUTURE