

**Sentry 1 channel receiver (code hopping)
short range @ 433.92 MHz
1000 transmitter capability type
SENHT1 & SENHT3 & SENHT4**

Connect power relayed pot and optional RSC2 pot as required

Programming:

To Load a transmitter

Press/PLUS 1LEARN button (display will show Prg and then 0)
Select the channel number - (to increment channel by 1, press/PLUS 1LEARN
- to increment by 2, press/PLUS 20)
and press/CLEAR/STORE
operate transmitter from a distance of 1 metre
display will show OFF and then current channel number
To exit program mode use/PLUS 20 to increment past channel 999

To delete a transmitter

-select channel number as above and press MEMO/ERASE
(display will show 0 and then current channel number)