

Sentry

Binary & French Rolling Code 3 Channel programming instructions SEN/B/T3 & SEN/R/T3

Select latch or pulse for each channel before connecting power,
Pulse output-link off - also required for time delay option
Latch output-link on

For Binary & French rolling code using 3 channel transmitters,
code the transmitters using the dip switches in the transmitters.
Set switches 1 to 3 off
Set switches 4 to 12 to your own code (never all on or all off)
Set the same code in all the transmitters
Now using only 1 transmitter

Press and release the PROGRAM button - LED will flash once for CH 1
Operate button 1 on the transmitter for CH 1 (2 metres away from the receiver)
-LED will flash 3 times

Press and release the PROGRAM button - LED will flash twice for CH 2
Operate button 2 on the transmitter for CH 2 (2 metres away from the receiver)
-LED will flash 3 times

Press and release the PROGRAM button - LED will flash thrice for CH 3
Operate button 3 on the transmitter for CH 3 (2 metres away from the receiver)
-LED will flash 3 times

Press and release the PROGRAM button - LED will flash once for 1 second
to indicate exit from program mode

OR

For time delay option press the program button for desired relay 'on' time
(maximum 25 seconds). release program button - LED will flash once to indicate
exit from program mode.

Transmitters will now operate.

Channels may be manually selected by pressing and releasing the program button