

E3AK7+

GEM

Keypad and Bluetooth

- Operating voltage 12~24Vdc
- Diecast metal
- **Bluetooth**
- Backlit keypad
- Vandal resistant
- Built in tamper alarm and buzzer (85dB)
- Weather resistant: IP65
- 2 LED displays with audible indication



WEATHER
RESISTANT
– IP 65 –





VANDAL
RESISTANT



BLUETOOTH




Bluetooth™

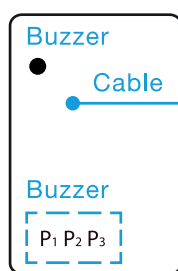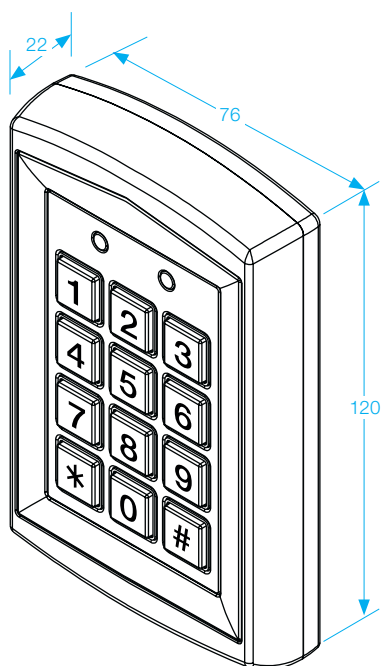

● Green	RTE (Request-To-Exit)
● Green	RTE (Request-To-Exit)
● Brown	DS (Door Sensor)
● Brown	DS (Door Sensor)
● Yellow	NC (Fail-Safe Electrified Lock)
○ White	COM
● Blue	NO (Fail-Secure Electrified Lock)
● Black (Polarity Insensitive)	V- (Power Supply)
● Red	V+ (Power Supply)

Jumper Pin Setting:

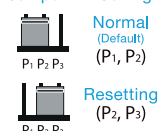

Reset Procedures

1. Power off Access Control Keypad.
2. Move the pin Jumper to P2 and P3, then power on.
3. Hear a long beep to complete resetting procedures.
4. Move the Pin jumper back to P1 and P2 to Normal setting.
5. Login as Admin and check all users, audit trail events are all cleared and everything is reset to factory default settings, except device name.

LED	STATUS
BLUE	POWER ON, STANDBY MODE
GREEN	UNLOCKED, DOOR ALWAYS UNLOCKED
RED	INVALID ACCESS, DOOR ALWAYS LOCKED

AUDIBLE BEEPS	STATUS
1 SHORT BEEP	KEY PRESS
1 LONG BEEP	VALID ACCESS, RESET IS COMPLETE
2 SHORT BEEPS	LOCKING COMPLETE
3 SHORT BEEPS	INVALID ACCESS
CONSTANT BEEPING	BLUETOOTH DEVICE VANDALISED DOOR SENSOR IS ON



E3AK7 and E3AK8

Bluetooth Access Control Keypads

E3AK7



E3AK8



Features:

- Access Modes: Use Bluetooth smartphone or enter 4 to 8 digit Passcode to access
- 1 Administrator and 1000 Users
- Built-in Tamper alarm and Buzzer (85dB)
- User Management : Add / Delete / View user data, Grant user access for specific dates or time periods, Change user passcode
- Audit Trail logs for last 1000 events
- Overhead LEDs and Backlit keys for easy use in the dark
- The keypad will be disabled for one minute when 3 failed passcode attempts.
- IP65

Specifications:

- Operating Voltage : 12 to 24 VDC
- Bluetooth Module : BLE 4.2 Bluetooth Low Energy
- Current Draw :
Standby current :
26mA@12VDC ; 15mA@24VDC
Working current (Relay active):
27mA@12VDC ; 16mA@24VDC
- Bluetooth Operating Distance :
Up to 50 meters (164 ft) without blocking by metal or concrete wall/door frames
- Smartphone Compatibility : Android 5.0 and up, iOS 9.0 and up
- Working Temperature :
-20 °C ~ +50 °C (-4 °F ~ 122 °F)
- Dimension :
E3AK7 : 120 (L) x 76 (W) x 22 (D) mm
E3AK8 : 152 (L) x 45 (W) x 25 (D) mm
- Finish : Aluminium alloy

Pre-Installation

E3AK7 & E3AK8 Parts List :



Flat head phillips screws,
Cone point x4



Three-point security screw x1



Three-point screwdriver
(special tool) x1



Anchor bolts x4



Crimp connectors x12


LED & Audible Indicators

LED	Status
Blue	Power on, Standby mode
Green	Unlocked, Door always unlocked
Red	Invalid access, Door always locked

Audible Beeps	Status
1 Short beep	Key press
1 Long beep	Valid access, Reset is completed
2 Short beeps	Login completed
3 Short beeps	Invalid access, Forget to press # after entering passcode within 30 seconds
Constant beeping	Bluetooth device vandalized, Door sensor is on

Wiring Diagram

(E3AK7 & E3AK8 have same wiring and pin setting)

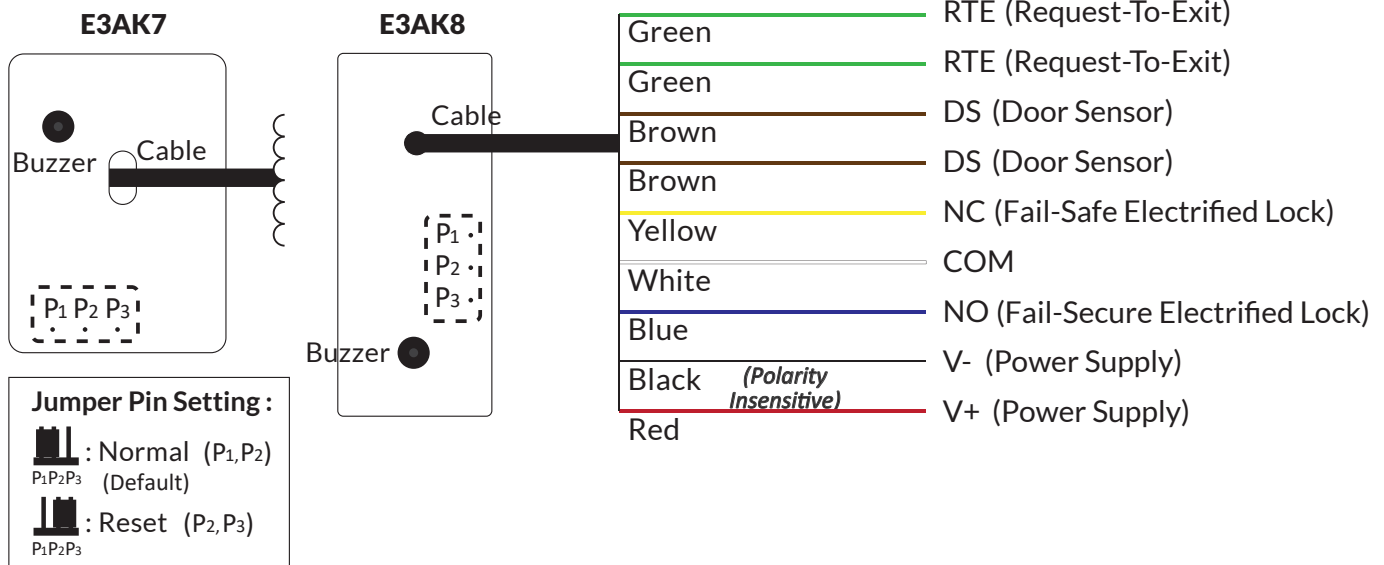


Reset Procedures

1. Power off Access Control Keypad.
2. Move the Pin Jumper to P2 and P3, then power on.
3. Hear a long beep to complete resetting procedures.
4. Move the Pin Jumper back to P1 and P2 to Normal setting.
5. Login as Admin and check all users, audit trail events are all cleared and everything is reset to factory default setting, except device name.

Install Crimp Connectors

 Crimp connectors included:





Crimp connectors



Use a pair of crimping pliers designed to crimp insulated connectors. Place the crimp connector into the compression slot. Be sure the crimping jaws are positioned over the stripped portion of the wire. Squeeze the handles together with enough force to crush the end of the butt splice.



Keypads Installation

E3AK7 Installation

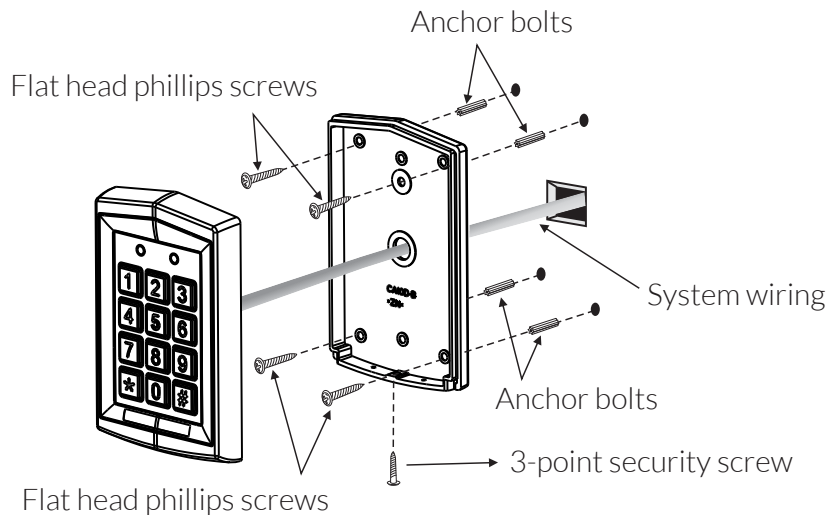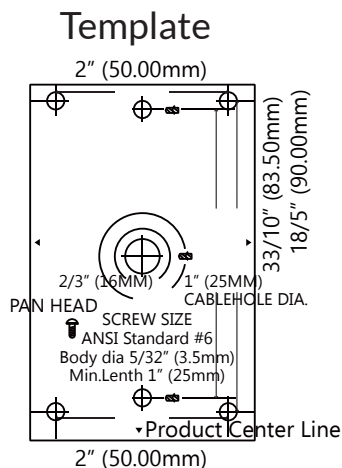

- ① Open E3AK7 Keypad by loosening and removing the back case three-point security screw at the bottom with the special tool.
- ② Use the provided drilling template to accurately locate and drill the required holes.
- ③ Use the screws provided to mount the back case on the wall. Be sure to draw the wiring through the large centre hole in back case, and keep level.
- ④ Connect accurately the system wiring following the label enclosed on the rear.
- ⑤ Put the unit back and screw it on by using the special tool.

E3AK8 Installation

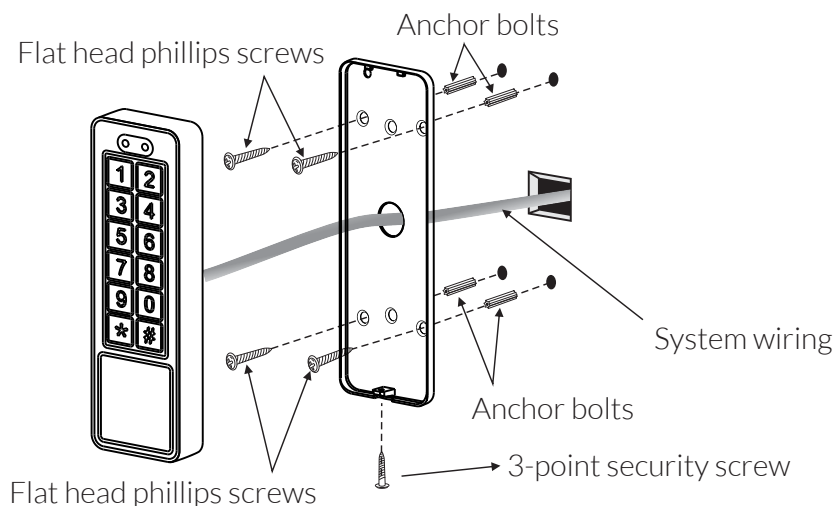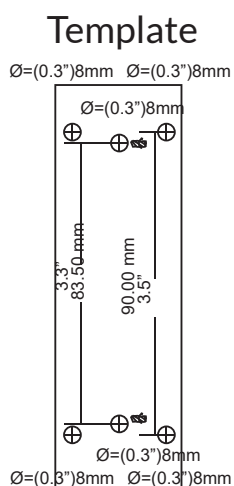

- ① Open E3AK8 Keypad by loosening and removing the back case three-point security screw at the bottom with the special tool.
- ② Use the provided drilling template to accurately locate and drill the required holes.
- ③ Use the screws provided to mount the back case on the wall. Be sure to draw the wiring through the large centre hole in backcase, and keep level.
- ④ Connect accurately the system wiring following the label enclosed on the rear.
- ⑤ Put the unit back and screw it on by using the special tool.

Software App Operations

1. Download E3AK App (for model E3AK Series, E3AK7 and E3AK8)



E3AK

Download E3AK App to set up. Scan QR Code on the left or download the App from Apple Store or Google Play depending on what kind of smartphone you use. Smartphone compatibility : Android 5.0 and up, iOS 9.0 and up

2. App Main Page Introduction

① Login

Administrator : Enter Admin ID and Passcode to login.

Admin ID : ADMIN

Default Admin Passcode : 12345 (Passcode : 4~8 digits)

User : Enter User ID and User Passcode to login.

User ID and User Passcode are given by the Administrator.

[Note]

- 1.) Administrator ID "ADMIN" can not be changed. Please change Admin's default passcode "12345" right after you login as the Admin.
Go to setting page, press Admin Passcode to Edit Admin Passcode.
- 2.) **Login Success / Login Failure indications will be shown as following :**

Login Success :

You Have Successfully Logged In. You May Now Unlock A Door.

Login Failure :

Login Failed. Please Verify Your Login Information Or Contact Your Administrator.

② Device name

Choose which device you want to unlock by pulling down the Device name listing.

③ Device distance

 
The distance between you and the Bluetooth Keypad/Reader.

④ Settings

Tap "Settings" to view or change setting functions.

⑤ LOCKED / UNLOCKED

LOCKED : Door lock status is Locked. (Default).

UNLOCKED : Press  button or the door icon  to unlock the door.


⑥ Auto

Press "Auto" to enable Auto unlock function to access.

Make sure to disable "Auto" before pressing  to enter Settings page.

⑦ Auto Proximity Range

Adjust Auto Proximity Range in Settings page. The range is between 0 to maximum 20 and it may have different results under different circumstances.

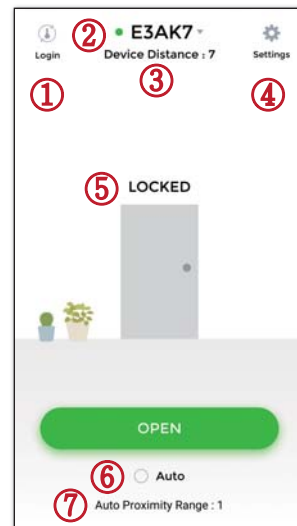

3. Administrator "Settings" Page Introduction

Tap "Settings" to view or change setting functions in Users "Settings" Page.

① Users : (See Figure 1 below)

- a. Add / Delete / Edit user information.
- b. ID (Up to 16 characters)
- c. Passcode (4~8 digits)
- d. Keypad Access : Enable / Disable keypad access for a user. (See Figure 2 below)

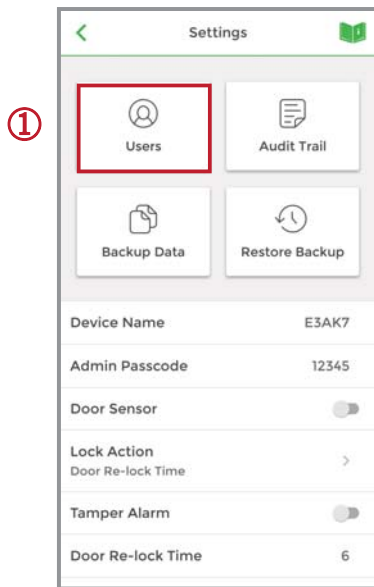


Figure 1

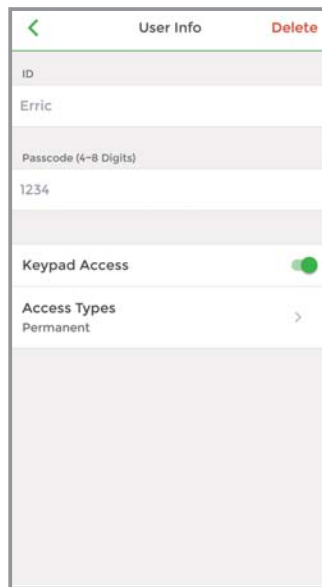


Figure 2

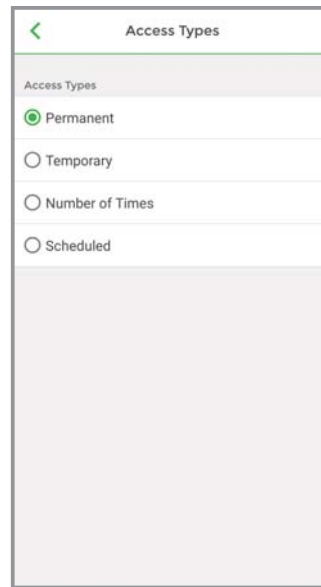


Figure 3

i. Access Type : (4 options) (See Figure 3)

- (A) Permanent : Permanent access is given by default.
- (B) Temporary : Set specific access time period for guests and visitors.
- (C) Number of Times : To set number of access granted to user.
(Please enter a number between 0 to 255)
- (D) Scheduled : To assign repeatedly access on specific days and hours for a certain period of time. This setting is useful for house cleaners or constructors who need temporary access on regular basis. (See Figure 4 and 5 next page)

② Audit Trail : (See Figure 4 and Figure 5 next page)

- a. Audit Trail is tracking last 1000 event logs including Tamper Alarm.
- b. Enter an user ID to search events for an user.
- c. Tap  to export all events to excel file.
- d. Tap  to refresh all events.

③ Backup Data : (See Figure 6 next page)

Backup Data is to backup Users, Admin Passcode, Door Sensor, Lock Action, Tamper Alarm and Door Re-lock Time to Administrator's phone and can be restored except Device Name, Tamper Sensor Level, Auto Proximity Range, About Us and Audit Trail logs.

Step 1 : Press "Backup Data", the App will show : Backup all data now?

Step 2 : Press Confirm, the App will show : Backup Status Backup Complete!

④ Restore Backup (See Figure 6 next page)

Restore the last backup data by Admin's phone to a new Access Control Keypad / Reader.

Step 1 : Press "Restore Backup", the App will show : Restore all data now?

Step 2 : Press Confirm, the App will show : Restore Status Restore Complete!

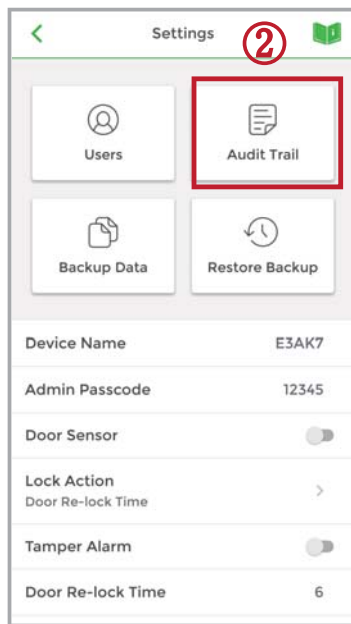


Figure 4

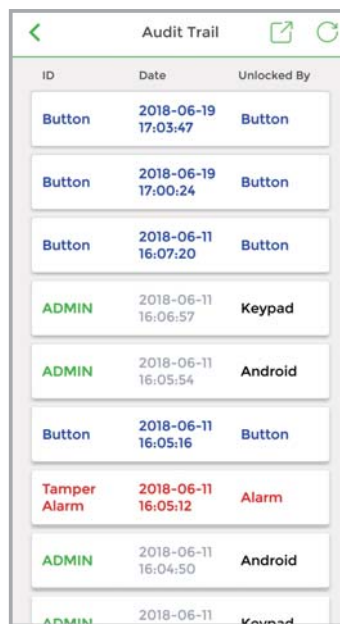


Figure 5


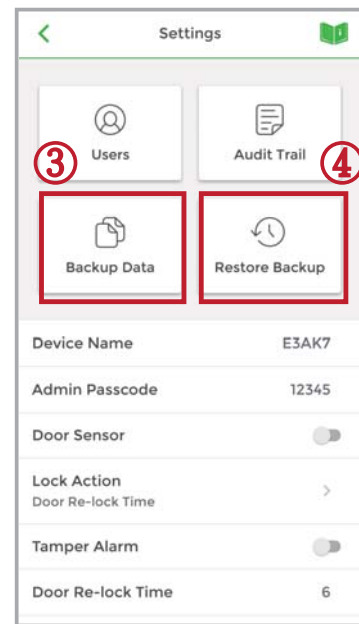


Figure 6

Administrator "Settings" Page Introduction Continued : (See the Figure)

- **Device Name** : Edit Device Name (Up to 16 characters)
- **Admin Passcode** : Edit Admin Passcode (4~8 digits)
- **Door Sensor** :
Enable Door Sensor when you connect to a closed-circuit magnetic sensor or a monitored door lock that has door sensor (or lock sensor) outputs to monitor the open or closed state of a door.
- **Lock Action** : (3 options)
Choose Door Re-lock Time, Door Always Unlocked, and Door Always Locked.
- **Tamper Alarm** :
If the device is vandalized, the tamper alarm will beep immediately and won't go off until it's switched off by Administrator.
- **Door Re-lock Time** :
6 seconds by default. Edit the Door Re-lock Time interval between 1 to 1800 seconds.
- **Auto Proximity Range** :
Adjust Auto Proximity Range here. The range is between 0 to maximum 20 and it may have different results under different circumstances.
- **Device Time** :
Make sure the Device Time is precisely synced with your current time zone to have correct and precise access data and information.
- **About us** :
View Device Models, App version, Website and E-Mail information.
- **Firmware version** :
See Firmware version of your Bluetooth Access Control Keypads/Readers.

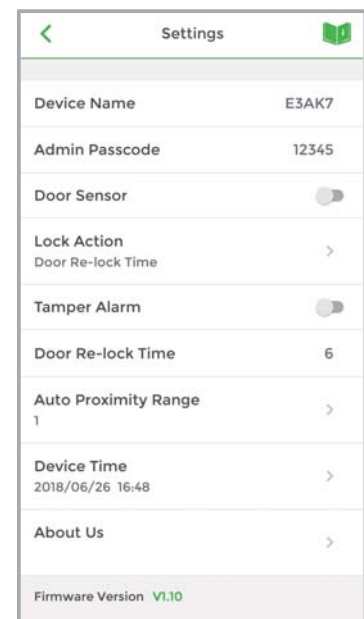

4. User's "Settings" Page Introduction

Tap "Settings" to view or change setting functions in User's "Settings" Page. (See Figure 7 below)

- Device Name : User can only view the Device Name. (See Figure 8 below)
- Auto Proximity Range : User can adjust Auto proximity range between 0 to maximum 20 to access. May have different results under different circumstances. (See Figure 9 below)
- About Us : View Device models, App version, Website information.

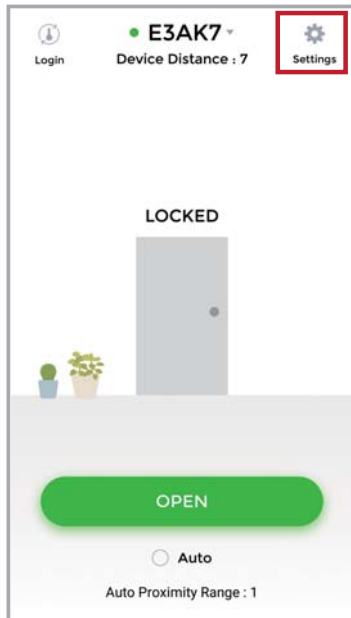


Figure 7

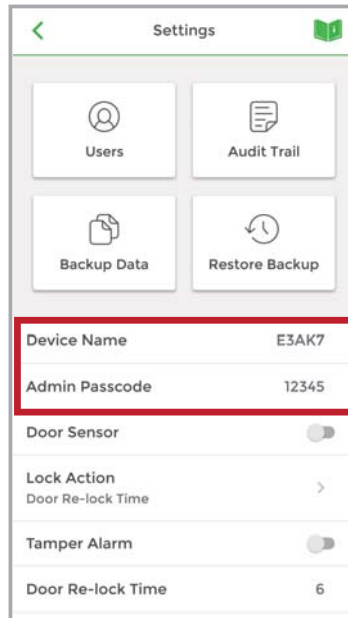


Figure 8


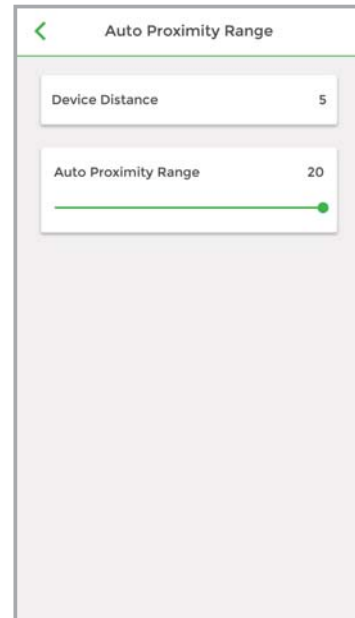


Figure 9

Operation Instructions

Note :

Stand next to the E3AK7 or E3AK8 Bluetooth keypad when you want to connect the Smartphone to unlock or login, the Bluetooth keypad can detect signal up to 50 meters (164 ft) distance. The response time of Bluetooth signal may vary depend on various mobile device models.

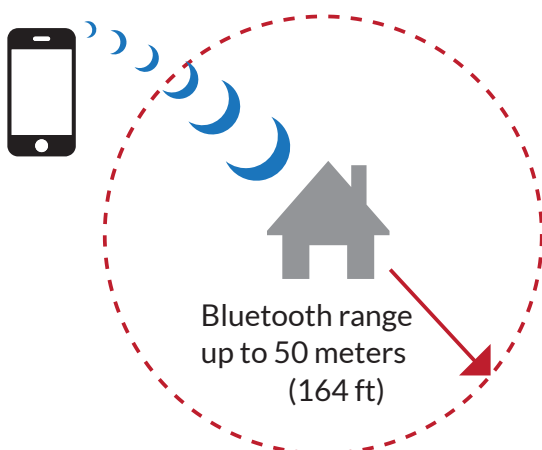

Keypad Passcode Access

After login is complete, you can enter your Passcode plus "#" to unlock the door.

For example :

If your passcode is 12345, enter 1 2 3 4 5 #.

Warranty

This Gianni product is warranted against defects in material and workmanship while used in normal service for a period of one year from the date of sale. Gianni's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to Gianni. Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair, or alteration, improper or abnormal usage, or faulty installation, or if for any other reason Gianni determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship.

Notice

The information and specifications printed in this manual are current at the time of publication. However, the Gianni policy is one of continual development and improvement. For this reason, Gianni reserves the right to change specifications without notice. Copyright ©2018 Gianni Industries, Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Gianni.



GIANNI INDUSTRIES, INC.

No.13, Zhongxing Rd., Tucheng Dist., New Taipei City 23678, Taiwan (R.O.C.)

T +886-2-2267-7986 **E** inquiry1@gianni.com.tw

F +886-2-2267-9876 **W** www.gianni.com.tw

E3AK7_E3AK8_Manual_180722_ver 1.1